



MODELS 1/2/3/4/5/6/7/EVOLUTION MANUAL

REPLACING THE POWRBAR PIN

- 1) Tap out the old Powrbar pin using a 4.5mm pin punch

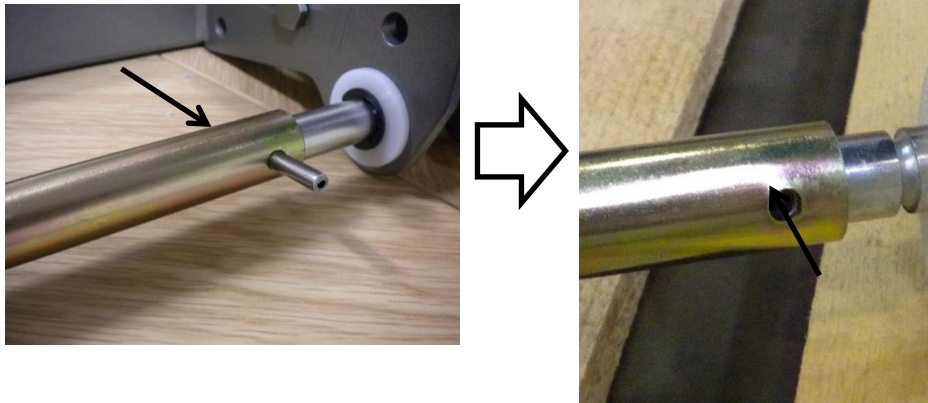

- 2) Line up the hole on the Powrbar with the hole on the hex shaft

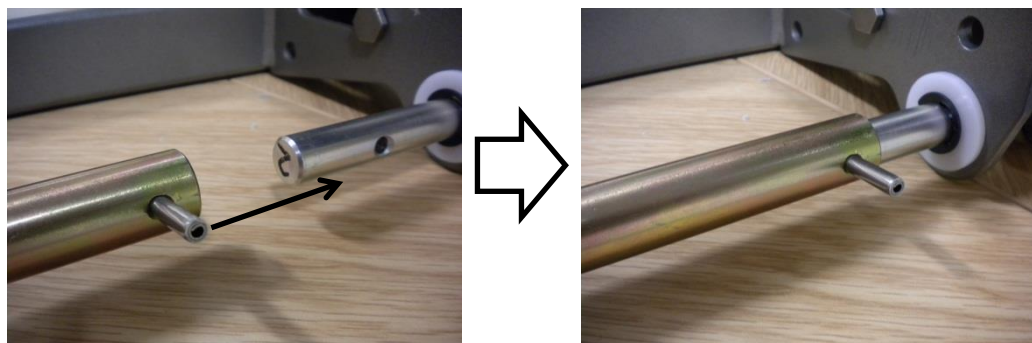

- 3) Tap in the replacement pin through the Powrbar/Hex shaft

