


HANDSET MAPPING INSTRUCTIONS – E SPEC ELECTRONICS



PLEASE ENSURE ROLLERS ARE OFF THE TYRES BEFORE PROCEEDING

To confirm that you have E Spec electronics, please check the serial number on the top of your electronics box, this will begin with the letter 'E'

- 1) Remove lid by unscrewing the four screws (see picture)

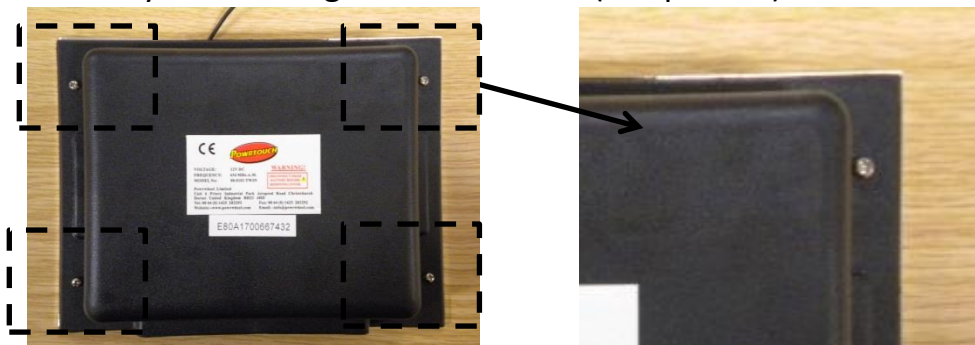

- 2) Switch on the electronics with the Red Isolator Key
- 3) Switch on the handset by pressing both red buttons
- 4) Press and keep depressed the remapping button (as indicated below), the red light on the electronics box will flash. Press & hold down any movement button on the handset.

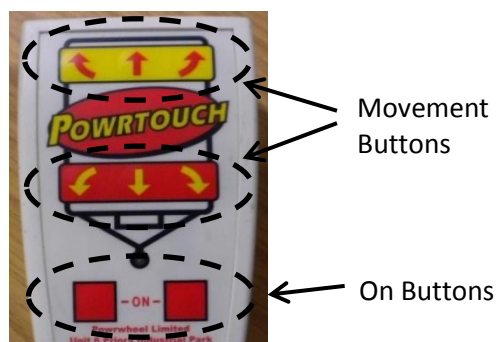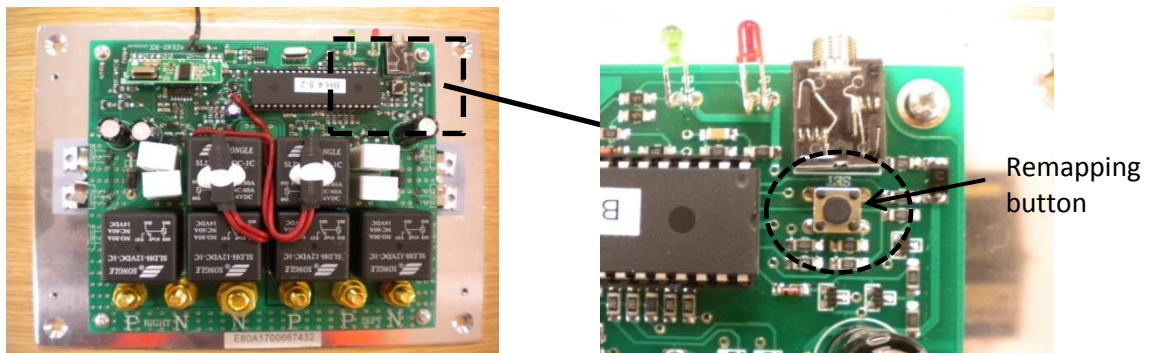

- 5) Release the remapping button, keeping the movement button press down
- 6) The handset will now be mapped into the electronics