

ALL POWRTOUCH MODELS


ROLLER GAP CHECKING/ADJUSTMENT

Recommended Roller/Tyre gaps:

Powrtouch Evolution Movers - 19mm


Powrtouch Models 1/2/3/7/Classic - 20mm

Powrtouch Models 4/5/6 - 15mm

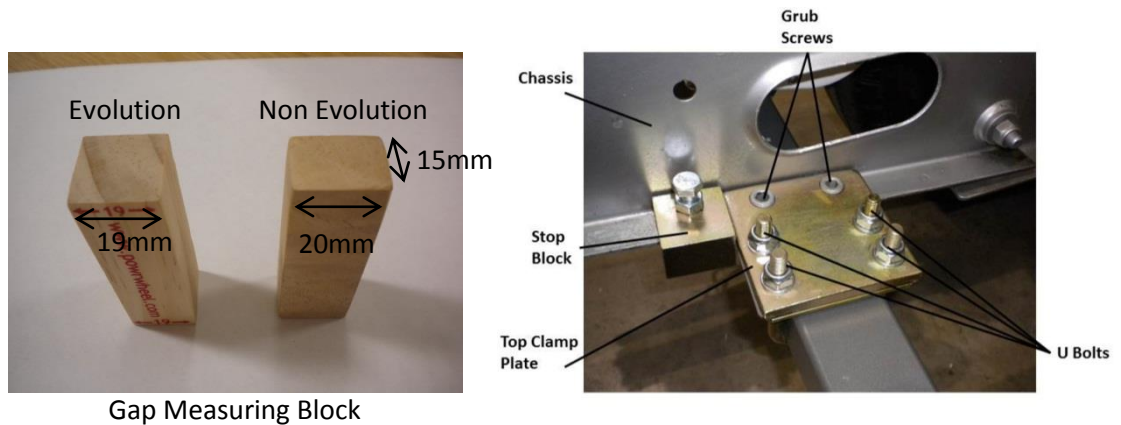


Gap Measuring Block

- 1) Fully disengage the rollers from the tyres.
- 2) Place the measuring block between the tyre and roller to confirm that gap that you have and do the same for the other roller(s).

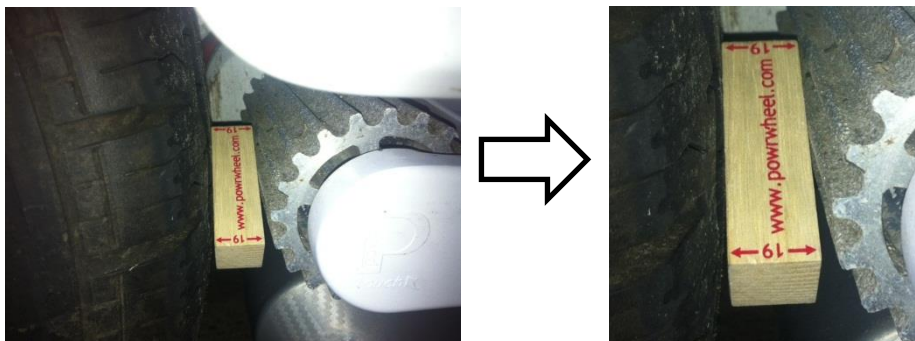

- 3) Should you need to adjust the gap, locate the clamp plates underneath your caravan.
- 4) Loosen the grub screws if fitted (fitted to all Evolution models & Powrtouch models 4/5/6).

- 5) Loosen the stop block and U-Bolts.
- 6) You can now adjust the gaps by moving the Powrtouch along the chassis to get the desired distance.

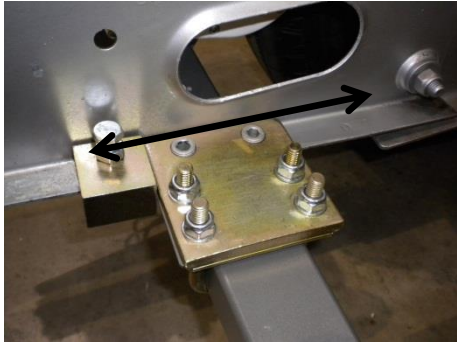

- 7) Place the measuring block back between the roller and tyre to re-check the gap.
- 8) With the measuring block in place, re-tighten the U-Bolts and the stop block (to torque setting 35 ft lbs), ensuring the stop block is flush up against the clamp plate.
- 9) Re-tighten the grub screws if fitted.
- 10) Remove the measuring block.