


MODEL 1/3/4/5/6/7

MANUAL RETRACTION OF THE ROLLERS OFF THE TYRES

In the unlikely event of the rollers not retracting off the wheels. There is a way to retract them manually.

- 1) **Make sure the Red Isolation Key is removed & handbrake applied.**
- 2) Remove the black rubber cover on the rear of the small Power-actuator Motor. Beneath this cover is a 9mm nut.

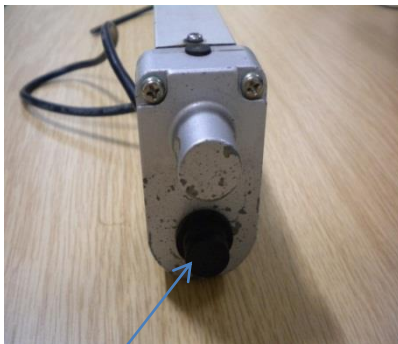

a. RUBBER BLACK COVER



9MM NUT

- 3) Turn the 9mm nut several times anti-clockwise until the nut becomes loose (there will be no visible movement on the rollers)
- 4) Once loose, use the remote or switch as per normal to retract the rollers off the wheel.





- 5) As the system is fitted with a reduction gearbox then if doing manually a large number of turns will be required to retract the rollers, therefore this is best done with a battery operated drill or screwdriver.

If in doubt contact a Powrwheel Engineer.